



**FOLLOW THESE STEPS AT THE
END OF EACH DAY TO KEEP YOUR
APPLICATOR WORKING AT PEAK
PERFORMANCE.**

STEP 1



EMPTY, WIPE & REFILL

Empty all solution from the cup and wipe inside with a damp rag. Fill the cup with water and reattach to the applicator.

STEP 2



FLUSH & INSPECT

Connect your turbine and spray into a bucket until the water runs clear. Inspect the pressure tube and air passages.

STEP 3



DISASSEMBLE

Remove the fluid control knob, needle spring, and needle from the back. Remove the collar and air cap from the front. Loosen and remove the fluid nozzle with a wrench.


STEP 4



SOAK & SCRUB

Place the needle, fluid nozzle, and air cap in warm water for 3–5 min. Do NOT soak the whole applicator. Scrub with the cleaning brush.

STEP 5

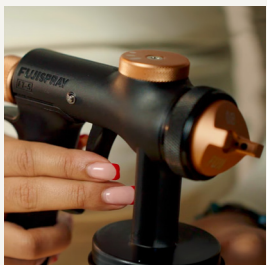

DRY, REASSEMBLE & WIPE

Let all parts air dry fully, then reassemble. Wipe the body of the applicator with a damp rag.



**WATCH THE CLEANING VIDEO
FOR YOUR APPLICATOR**

Scan the QR code to watch